
CHESTERTON Global Solutions. Local Service.

33K Split Rotary Seal SEAL INSTALLATION - TWIST METHOD


Conventional for unlimited installation space

Seals under 3 inch shaft are delivered without tie straps

- Read entire set of instructions before you start
- Clean seal housing and shaft thoroughly of all contaminants
- Ensure all seal split joints are kept clean throughout installation process
- Be careful not to nick or damage the seal inserts

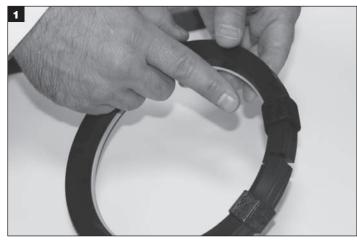


No preference to which side of the seal faces the fluid.

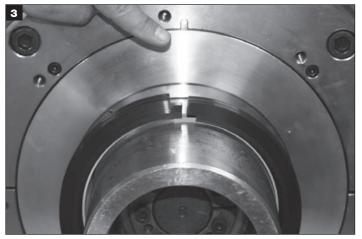


Remove the tie straps. Locate and join the split ends at the 12 o'clock position.

NOTE: After installation is complete, a gap between the sealer ring split-ends is acceptable.

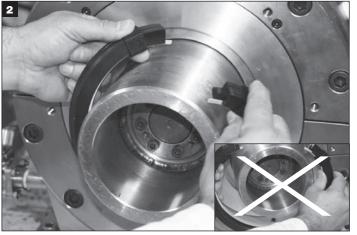

Holding at the two tie straps twist and wrap the seal around the shaft.

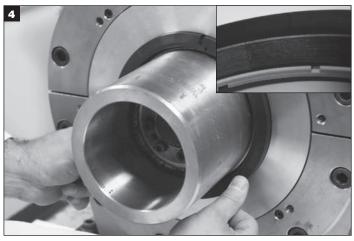


Apply force as needed to press the seal uniformly into housing. Start pressing joints first towards 6 o'clock position.

For limited installation space



Slide one tie strap from one end next to the other.

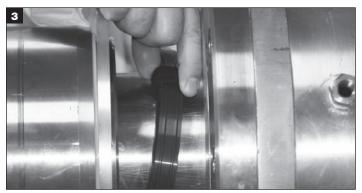


Press the seal components together and slide the second tie strap over.



Remove the tie straps. Locate and join the split ends at the 12 o'clock position.


NOTE: After installation is complete, a gap between the sealer ring split-ends is acceptable.

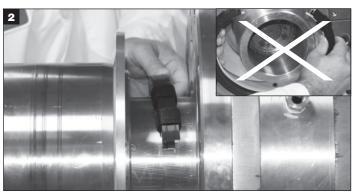

Expand the seal splits apart and position the tied end towards the shaft.



Repeat step 3 until second tie strap reaches to the other split end.

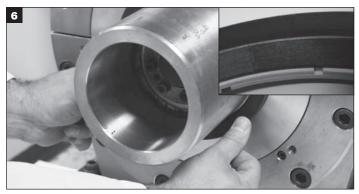

Apply force as needed to press the seal uniformly into housing. Start pressing joints first towards 6 o'clock position.



DISTRIBUTED BY:

Chesterton ISO certificates available on www.chesterton.com/corporate/iso

860 Salem Street Groveland, MA 01834 USA Telephone: 781-438-7000 Fax: 978-469-6528 www.chesterton.com

© A.W. Chesterton Company, 2012. All rights reserved. ® Registered trademark owned and licensed by A.W. Chesterton Company in USA and other countries.